CONTROLS (UK) LTD



Fine Controls have been supplying process controls & instrumentation equipment since 1994, & now serves an ever expanding customer base, both in the UK & globally.

We offer a full range of valve & instrumentation products & services, with our product rangerepresenting leading technologies & brands:

Flow: Flow Meters & Transmitters, Flow Switches, Flow Control Valves & Batch Control Systems

Temperature: Temperature Probes & Thermowells, Temperature ransmitters, Temperature Regulators & Temperature Displays

Level: Level Transmitters & Switches

Pressure: Pressure Gauges & Transmitters, Precision & High Pressure Regulators & I-P Converters, Volume boosters.

Precision Pneumatics: Pressure Regulators, I-P Converters, Volume Boosters, Vacuum Regulators

Valves: Solenoid & Pneumatic Valves. Control Valves & Positioners. Actuated Ball, Globe or Diaphragm Valves & Isolation Valves

Services: Repair, Calibration, Panel Build, System Design & Commissioning





burkert



SIEMENS





A rotork Brand







Honeywell













J Z Z

Fine Controls (UK) LTD, Bassendale Road, Croft Business Park, Bromborough, Wirral, CH62 3QL UK Tel: 0151 343 9966

Email: sales@finecontrols.com



Electronic Controller for vapour recovery



- Input fuel impulse
- Input diesel detection
- PWM-outputs for control of proportional valve

Type 1094EV can be combined with...







Manual control unit

Type 1094



Power supply Traco Power

When a vehicle is filled with petrol, the petrol flowing into the tank displaces an equal volume of petrol vapour out of the tank. To prevent this petrol vapour escaping into the atmosphere, it must be siphoned off. In the solution offered by Bürkert this vapour extraction is achieved by applying a vacuum via an upstream proportional valve in the petrol pump reservoir tank. A suction pump transports the petrol vapour out of the vehicle tank and compresses it in the petrol pump feed tank. To prevent an overpressure in the feeder tank, the volume of petrol drawn and the sucked back petrol vapour must be balanced. The petrol quantity dispensed into the vehicle tank is measured using the calibrated piston meter of the petrol pump, the output signal of which is converted by a petrol pump computer into pulsed signals that are transmitted to the control unit. The control unit is fitted with a (SUB-D) port so that it can communicate (calibration, measurements) with the manual control unit.


Technical data		
Operating voltage	24V	
Voltage tolerance	± 10%	
Ambient temperature	-25 to 55 °C (no icing)	
Relative humidity	5% to 85% (no condensation allowed)	
Input signal Fuel impulses	Frequency input 0-51l/min. Pulse rate is adjustable with the help of the manual control unit between 31200 impulses/l	
Input signal Diesel detection	0-26V (0V to +0,9V: Low; 3,4V to 26V: High	
Output signal Proportional valve	PWM (250Hz, 24V, 0-100%) Outlet current: 0-250mA	
Output signal Motor contactor	24V Outlet current: 0-150mA	
Protection class	IP 00	



Method of operation of a filling pump with vapour recovery

The valve flow - gas flow characteristic of a fuel pump system is by nature non-linear. To ensure uniform suction over the entire control range, a linear characteristic curve is required. Accordingly a system calibration is carried out using a control "unit (type MKNE-1904)" in which various points along the characteristic curve are automatically saved in the memory of the control unit. The number of points is dependent on the characteristic curve and is automatically determined by the control unit. Likewise, correction of the characteristic curve takes place automatically by linear interpolation between these points.

At the start of dispensing, the control unit calculates the amount of petrol dispensed from the measured pulse rate. Using the linearised characteristic curve and suction rate K-factor, the setpoint value for the valve flow can now be determined and the proportional valve is controlled accordingly to siphon off the petrol vapour. Upon activation of the proportional valve, the vacuum pump is also started to create a vacuum pressure. Upon completion of petrol dispensing, the petrol pump computer no longer generates any impulses and the vapour recovery proportional valve is closed. Once the shut-off delay has elapsed, the vacuum pump is switched off.

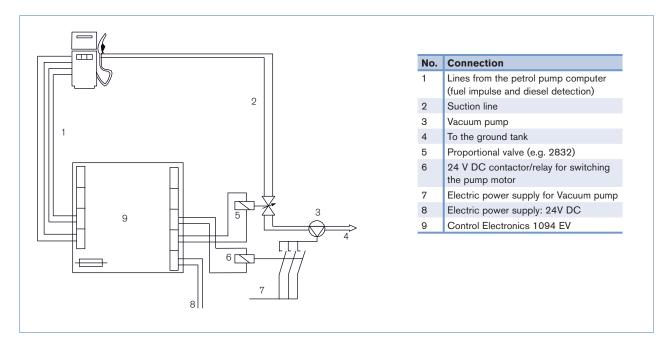

Ordering chart


Circuitry	Item no.
Electronic Controller for vapour recovery 1094EV	208 373



Ordering chart for accessory


Circuitry	Item no.
Manual control unit german	645 854
Manual control unit english	139 431
Self-adaption set german	137 713
Self adaption set english	704 296
Power supply (Traco Power) 24V TBL30-124	770 156


PIN Connection

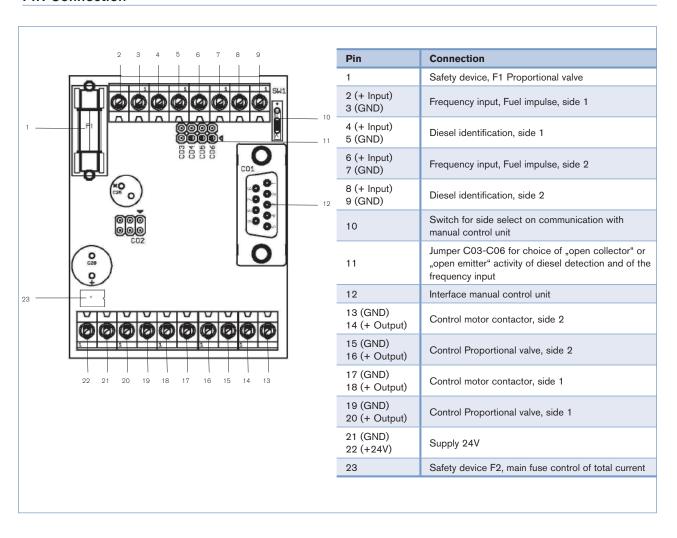



Dimensions [mm]

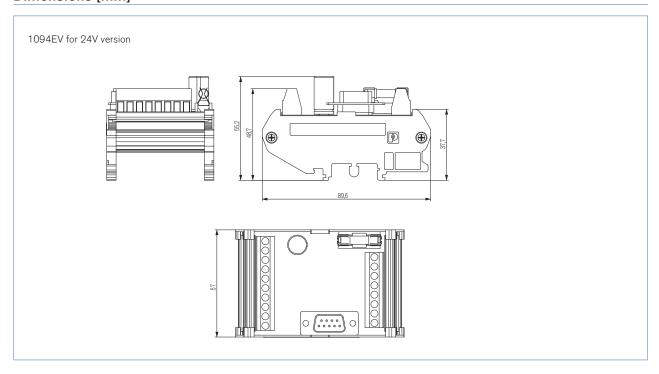

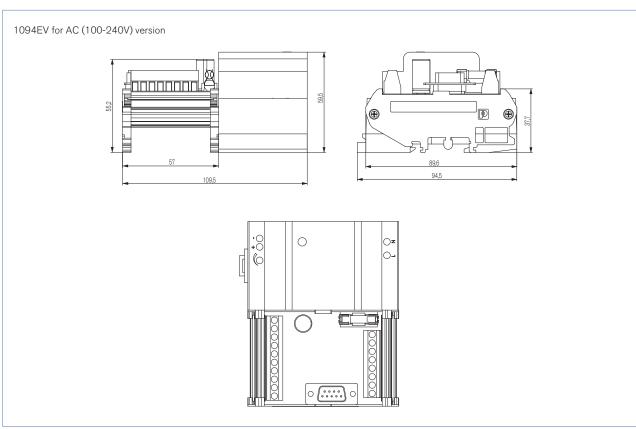

To find your nearest Bürkert facility, click on the orange box



www.burkert.com

In case of special application conditions, please consult for advice.

Subject to alteration.
© Christian Bürkert GmbH & Co. KG

0907/0_EU-en_00895126